


## Home Screen

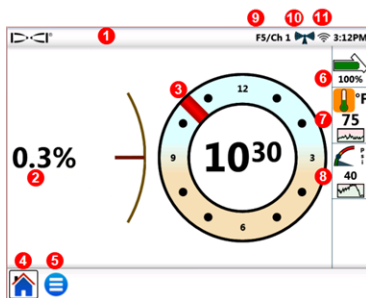


1. Status bar
2. Transmitter (Tx) pitch
3. Tx roll
4. Home icon (shown active)
5. Main Menu icon
6. Tx battery
7. Tx temp. and temp. history
8. Fluid pressure and FP history
9. Locating receiver / Telemetry channel
10. Telemetry signal strength
11. Wi-Fi connection

Data displays automatically when broadcast from a DigiTrak<sup>®</sup> receiver. From any other screen, tap **Home**  to return.


## System Setup


Tap **Main Menu**  to reach Settings.


For primary device settings, tap **Device** , then the appropriate tab to set:





- date, time, time zone, language, and profiles
- units: temperature, distance, angle, pressure, and force
- screen brightness and speaker volume (volume must be above zero to be adjustable in onboard videos)


To set up a Wi-Fi or Bluetooth connection, tap **Network** .






For temperature, pressure, and force alarms, tap **Alarms** .

To turn pitch history on or off, tap **Pitch History** .



To set your receiver model, telemetry channel, or region, tap **Receiver**  (this guide assumes an F5 receiver).

To set up a cable transmitter or SST<sup>®</sup>, tap **Peripherals** .

To install software updates or applications, tap **Update** .




On the **Main Menu**, use the **Help** options to access safety warnings , system information , self-tests , this Quick Start Guide , or instructional videos .

## Check Systems

At the **Main Menu** , tap **Power On Self-Tests**  for information on tests the Aurora<sup>®</sup> display completed when powering up. This is useful for troubleshooting a particular component that may not be properly connected, powered on, or enabled.

## Using the Home Screen

### Telemetry Signal Strength

The number of bars in the telemetry signal strength icon indicates the strength of signal reception. A grey icon  indicates no reception; a steady black icon  indicates Aurora is connected to a receiver that is not sending data. A flashing blue icon  indicates Aurora is receiving new data from the receiver.


### Roll Offset

When roll offset is enabled on the receiver for a standard transmitter, it displays on the Home screen automatically. Tap and hold the roll offset clock only for cable transmitter roll offset.


### Fluid Pressure

Fluid pressure values are only available with a fluid pressure transmitter or TensiTrak<sup>®</sup> system; maximum displayed pressure is 250 psi. Pressure over 250 psi displays as **+OL**.

### Temperature

Because the digital thermometer is inside the transmitter, it takes time to detect temperature increases due to external drilling conditions. Use the Transmitter (Tx) temperature and history on the **Home**  screen to monitor temperature and resolve increases quickly to avoid irreversible transmitter damage.

## Menu Shortcuts


Tap and hold screen elements like pitch, temperature , or receiver/telemetry channel (**F5/Ch1** on the "Home Screen" on the previous page) to jump to settings for those elements.

## Depth Readings

When the receiver takes a depth reading at the locate line, Aurora displays the blue Depth Bar. Data is highlighted blue for 10 seconds and remains for 5 minutes.

## Predicted Depth

When the receiver takes a depth reading at the front locate point (FLP), Aurora displays the blue Depth *and* Distance Bars. Data is highlighted blue for 10 seconds and remains for 5 minutes.

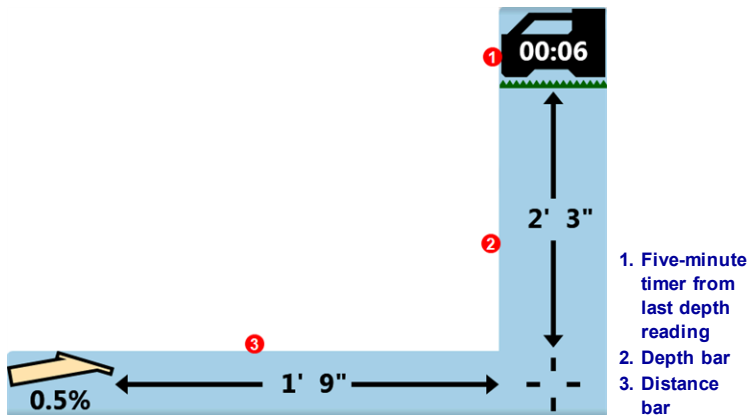

## Telemetry Setting for Classic F5


Recent updates to Aurora software include an enhanced telemetry option called **Tele-B**. It is the default and recommended selection for Falcon systems, classic F2, and most classic F5. However, for classic F5 receivers on software versions 1.01–1.03 (see Info > Tele SW ver), select Classic F5 for **standard** telemetry.

Watch our DigiTrak® training videos at  
[www.youtube.com/dcikent](http://www.youtube.com/dcikent)

For detailed information, see your system operator's manual, available at [www.DigiTrak.com](http://www.DigiTrak.com). If you have questions, contact Customer Service at 425.251.0559 or 800.288.3610 US/CA.


## Target Steering


When a target depth is entered on the receiver, Aurora automatically enables the Target Steering<sup>®</sup> screen.

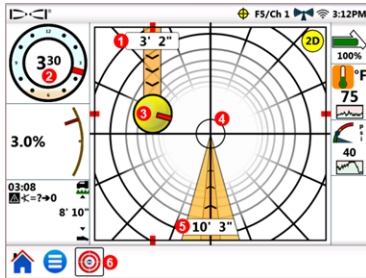


1. Current depth below receiver
2. Current roll
3. Projected destination on current heading
4. Target
5. Horizontal distance to target
6. Target steering icon

Steer the yellow steering indicator ball (the projected destination) onto the target. In this case, the drill head is currently estimated at 3' 2" below the plane of the receiver and must travel 10' 3" to reach the target point below the receiver.

The red marker  inside the steering indicator shows the current roll position of the drill head. When the marker points toward the target, the drill head is correctly positioned to drill closer to the intended bore path. As the drill head moves forward, the steering indicator will also move. Monitor the steering indicator closely, make small steering adjustments promptly, and watch and wait for the results.

The flashing target steering icon  in the Status bar indicates target steering data is being received. If target steering data is lost, the app remains loaded so once data resumes, it will continue processing without interrupting your current task.

Tap  at any time to use the classic target steering view from previous versions of DigiTrak remote displays.